

## SINGLE & TWIN POLE LITE, TIER LITE, BORDER LITE, BORDER LITE TWIN RETRO™ LUMINAIRE INSTALLATION INSTRUCTIONS



**NOTE:** THESE INSTRUCTIONS MUST NOT CONTRAVENE YOUR LOCAL ELECTRICAL AUTHORITY REGULATIONS, WITH WHICH ALL INSTALLATIONS HERE IN MUST COMPLY. PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE MUST BE INSTALLED BY A LICENCED ELECTRICIAN

Make a slurry of concrete, make sure the conduit is protruding out of the concrete slurry and there is at least 19 3/4" of cable protruding out of the conduit. Unscrew the grub screws and remove the bottom section of tube below the lamp holder section and push it into the concrete slurry over the conduit and pull the cable through the tube. Make sure that there is concrete in the bottom of the pole and that the pole is vertical before the concrete sets. There must be concrete in the bottom of the tube to stop moisture build up. Unscrew the orange PVC connection on the bottom of the lamp holder section and slide it over the 110/120 volt supply cable. Connect the phase (active) wire to the BLACK wire of the luminaire and neutral wire to the WHITE wire of the luminaire. Screw the orange PVC connection back onto the orange nipple of the luminaire and fit the lamp holder section onto the tube using the stainless steel grub screws provided.

**DO NOT** use a trailing edge ac. dimmer control. Only a leading edge dimmer unit is suitable.  
**DO NOT** connect in close proximity to inductive loads. eg. air conditioning systems, water pumps etc. without appropriate mains filtering. Use a suppression interface module for every six luminaires connected to the circuit.  
**DO NOT** connect to a circuit that has an electronic soft start motor starter on it.  
**DO NOT** connect to any Electronic Home Automation System without checking with that systems Manufacturer that it is suitable for the control of this HUNZA™ fixture.

**Warning:** If two 50 watt lamps are installed the luminaire will not operate, the electronic transformer has a built in safety shut down system that will not switch the lamps on when the power is applied.  
If this situation occurs -  
a) Switch power off.  
b) Remove lamps and replace with two 20 watt lamps & switch power on.

**Warning:** Take care to place luminaire in a suitably safe position, due to operating temperature of the luminaire.

**NOTE:** Due to the nature of electronics, the ambient temperature of the installation location must be considered carefully as the luminaire may not operate reliably at temperatures below -18°F (8°C).

### LAMP CHANGING

**CAUTION:** Make sure that the power to the luminaire is switched off before attempting to change the lamp. Beware of hot luminaire and lamp. Make absolutely sure when changing lamps that the correct wattage lamp is installed i.e. 50 watt lamps are most common however RETRO™ luminaires e.g. Twin Pole Lite and luminaires wired to HUNZA™ IG40 transformers all have 20 watt lamps installed. Incorrect wattage lamps may cause the transformers to either - in the case of the RETRO™ luminaires not to illuminate due to overload and in the case of the HUNZA™ IG series transformers overloading will cause the transformers to heat up and turn the luminaires off and on.

**TIER LITE & BORDER LITE & BORDER LITE TWIN WARNING:** Do not touch halogen capsule with bare fingers, leave plastic bag over the capsule & push into the lamp holder. Then remove plastic bag before switching fitting on.

#### Lamp Changing Sequence (MR16)

Only use open faced lamps, not glass covered lamp, as glass covered lamp may cause luminaire to leak. Unscrew lens gasket and lens, make sure there is no dirt or grit on the gasket.

Dirt or grit on the gasket may cause luminaire to leak.

#### Gasket and lens sequence (Not Tier Lite)

Place lens on top of lamp and put orange gasket on top of lens. Screw on lens ring. It is recommended that high quality lamps are used when replacing lamps. Do not over tighten lens ring as this will make removal difficult and may cause lamp to break.

### GLARE GUARD INSTALLATION (POLE LITES)

Carefully remove lens ring making sure not to drop the glass lens and cause damage to it, keeping gasket in place. Hold body of luminaire tightly and screw Glare Guard ring onto light luminaire. Still holding body of luminaire tightly rotate glare guard to desired position.

**Stainless Steel Maintenance:** To maintain the finish of 316 stainless steel it is recommended to wash the luminaire with water from time to time to stop salt and corrosive elements building up. If tea staining appears, a commercially available stainless steel cleaner is recommended to remove this.

## SINGLE & TWIN POLE LITE, TIER LITE, BORDER LITE, BORDER LITE TWIN RETRO™ LUMINAIRE INSTALLATION INSTRUCTIONS



**NOTE:** THESE INSTRUCTIONS MUST NOT CONTRAVENE YOUR LOCAL ELECTRICAL AUTHORITY REGULATIONS, WITH WHICH ALL INSTALLATIONS HERE IN MUST COMPLY. PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE MUST BE INSTALLED BY A LICENCED ELECTRICIAN

Make a slurry of concrete, make sure the conduit is protruding out of the concrete slurry and there is at least 19 3/4" of cable protruding out of the conduit. Unscrew the grub screws and remove the bottom section of tube below the lamp holder section and push it into the concrete slurry over the conduit and pull the cable through the tube. Make sure that there is concrete in the bottom of the pole and that the pole is vertical before the concrete sets. There must be concrete in the bottom of the tube to stop moisture build up. Unscrew the orange PVC connection on the bottom of the lamp holder section and slide it over the 110/120 volt supply cable. Connect the phase (active) wire to the BLACK wire of the luminaire and neutral wire to the WHITE wire of the luminaire. Screw the orange PVC connection back onto the orange nipple of the luminaire and fit the lamp holder section onto the tube using the stainless steel grub screws provided.

**Warning:** when inserting the fixture into the ground apply force only to the top of the pole (DO NOT apply any pressure to the head or the connecting arm).  
**DO NOT** use a trailing edge ac. dimmer control. Only a leading edge dimmer unit is suitable.  
**DO NOT** connect in close proximity to inductive loads. eg. air conditioning systems, water pumps etc. without appropriate mains filtering. Use a suppression interface module for every six luminaires connected to the circuit.  
**DO NOT** connect to a circuit that has an electronic soft start motor starter on it.  
**DO NOT** connect to any Electronic Home Automation System without checking with that systems Manufacturer that it is suitable for the control of this HUNZA™ fixture.

**Warning:** If two 50 watt lamps are installed the luminaire will not operate, the electronic transformer has a built in safety shut down system that will not switch the lamps on when the power is applied.

If this situation occurs : a) Switch power off b) Remove lamps and replace with two 20 watt lamps & switch power on.

**Warning:** Take care to place luminaire in a suitably safe position, due to operating temperature of the luminaire.

**NOTE:** Due to the nature of electronics, the ambient temperature of the installation location must be considered carefully as the luminaire may not operate reliably at temperatures below -18°F (8°C).

### LAMP CHANGING

**CAUTION:** Make sure that the power to the luminaire is switched off before attempting to change the lamp. Beware of hot luminaire and lamp. Make absolutely sure when changing lamps that the correct wattage lamp is installed i.e. 50 watt lamps are most common however RETRO™ luminaires e.g. Twin Pole Lite and luminaires wired to HUNZA™ IG40 transformers all have 20 watt lamps installed. Incorrect wattage lamps may cause the transformers to either - in the case of the RETRO™ luminaires not to illuminate due to overload and in the case of the HUNZA™ IG series transformers overloading will cause the transformers to heat up and turn the luminaires off and on.

**TIER LITE & BORDER LITE & BORDER LITE TWIN WARNING:** Do not touch halogen capsule with bare fingers, leave plastic bag over the capsule & push into the lamp holder. Then remove plastic bag before switching fitting on.

#### Lamp Changing Sequence (MR16)

Only use open faced lamps, not glass covered lamp, as glass covered lamp may cause luminaire to leak.

Unscrew lens gasket and lens, make sure there is no dirt or grit on the gasket.

Dirt or grit on the gasket may cause luminaire to leak.

#### Gasket and lens sequence (Not Tier Lite)

Place lens on top of lamp and put orange gasket on top of lens. Screw on lens ring. It is recommended that high quality lamps are used when replacing lamps. Do not over tighten lens ring as this will make removal difficult and may cause lamp to break.

### GLARE GUARD INSTALLATION (POLE LITES)

Carefully remove lens ring making sure not to drop the glass lens and cause damage to it, keeping gasket in place. Hold body of luminaire tightly and screw Glare Guard ring onto light luminaire. Still holding body of luminaire tightly rotate glare guard to desired position.

**Stainless Steel Maintenance:** To maintain the finish of 316 stainless steel it is recommended to wash the luminaire with water from time to time to stop salt and corrosive elements building up. If tea staining appears, a commercially available stainless steel cleaner is recommended to remove this.